
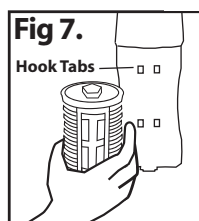
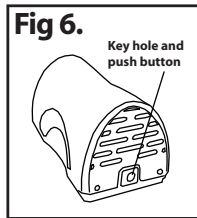
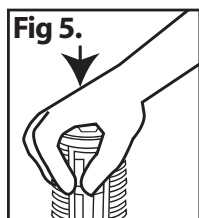
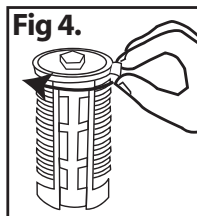
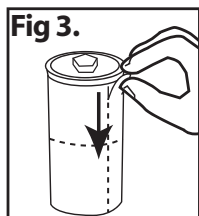
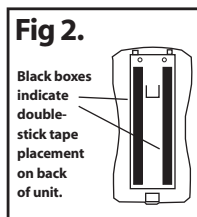


Instructions: **F-MATIC ONE**™ Odor Neutralization & Elimination

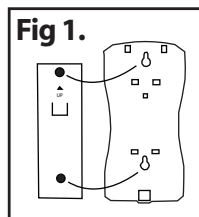

Mount F-MATIC ONE Mini Dispenser to wall using double faced tape.

• Mounting with double faced tape

1. Attach plastic hanging plate to back of dispenser by inserting tabs on plate into holes on dispenser (with "up" arrow pointing up) and sliding to lock into place (Fig. 1).
2. Apply sticky side of tape to proper locations by pressing firmly (Fig. 2).
3. Remove tape backings and press back plate to wall firmly.

Note: Be sure dispenser is level when affixing to mounting surface. Do not attempt to remove or replace.

If desired, to mount dispenser into drywall, plaster, stucco, or tile using wall screws and anchors (not provided), use screw holes in back of unit.

F-MATIC ONE Mini Dispenser Instructions

• Preparing the F-MATIC ONE refill for loading

1. Remove wrapper (Fig. 3)*
2. Remove side pull strap at top by pulling the plastic ring around the refill (Fig. 4).
3. Press top down firmly into place with palm of hand to activate liquid (Fig. 5).


*Note: TO REDUCE FRAGRANCE OUTPUT, leave bottom half of plastic label in place by tearing carefully along horizontal perforation.

• Loading the F-MATIC ONE refill

1. Open dispenser by turning key (if locked) clockwise 180 degrees at bottom of dispenser. Push button firmly and lift cover upward (Fig. 6).
2. Place refill into dispenser by hanging refill on small hooks in back of dispenser (Fig. 7). Close unit housing.

Installation Location:

Choose an area where the air will disperse the fragrance and neutralize throughout the entire area, i.e. 2-4ft. within the entrance way.

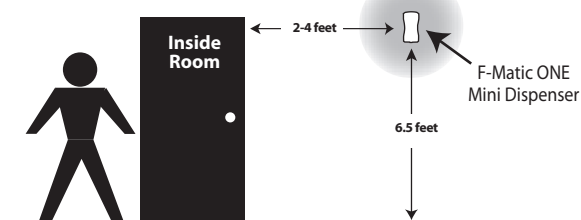

Additional dispensers may be installed for larger areas

Manufactured By:

F-MATIC
Innovation in Sanitation™

299 S. Millpond Dr. Lehi, UT 84043
1.800.824.9994 801.768.2000
fax 1.888.878.8828 www.fmatic.com

F-MATIC
ONE™

Odor Neutralization & Elimination

Protected by US and foreign patents